

# HITACHI



*HITACHI Excavators*

---

# HITACHI Excavators Price List

Machine Model & Cylinder	Serial Number	Rod	Bore	Seal Kit Number	MISC Parts	NET USD
<b>MODEL EX60</b>						
BOOM		65	115	4217002		
ARM		60	100	4217003		
BUCKET		55	90	4217004		
<b>MODEL EX60-2-3</b>						
BOOM		65	115	4306444		
ARM		60	95	4306445		
BUCKET		55	85	4306446		
<b>MODEL EX60-5</b>						
BOOM		65	115	4369762		
ARM		60	95	4369718		
BUCKET		55	85	4369716		
<b>MODEL EX90</b>						
BOOM		65	95	4216514		
ARM		70	105	4216515		
BUCKET		60	95	4216516		
<b>MODEL EX100</b>						
ARM		75	105	4206343		
BOOM		70	95	4206340		
BUCKET		65	95	4206345		
<b>MODEL EX100-3</b>						
BOOM		70	95	4320996		
ARM		75	105	4320997		
BUCKET		65	95	4320994		
<b>MODEL EX100M-3</b>						
BOOM		70	95	4286743		
ARM		75	105	4286770		
BUCKET		65	95	4286739		
<b>MODEL EX100-5</b>						
BOOM		70	95	4379260		
ARM		75	105	4379261		
BUCKET		65	95	4364914		
<b>MODEL EX120</b>						
ARM		80	115	4206344		
BOOM		75	105	4206343		
BUCKET		65	95	4206345		
<b>MODEL EX120-2-3</b>						
ARM		80	110	4286463		
BOOM		70	105	4286459		
BUCKET		65	95	4286739		
<b>MODEL EX120-5-6</b>						
BOOM		70	105	4364912		
ARM		80	110	4364913		
BUCKET		65	95	4364914		
<b>MODEL EX150</b>						
ARM	01001-UP	85	120	4216264		
BOOM LH	01001-UP	80	115	4369893		
BOOM RH	01001-UP	80	115	4369893		
BUCKET	01001-UP	80	115	4369893		
<b>MODEL EX160</b>						
BOOM		80	115	4369893		
ARM		85	120	4216264		
BUCKET		80	115	4369893		
<b>MODEL EX150LC-5, EX160LC-5</b>						
ARM	1002-	85	115	4389720		
ARM	1002-	85		4272960	DU BUSHING	
ARM	1002-		115	0310908	WEAR RING	
BOOM RH	1002-	85	120	4389720		

Please email us for our latest pricing

# HITACHI Excavators Price List

Machine Model & Cylinder	Serial Number	Rod	Bore	Seal Kit Number	MISC Parts	NET USD
BOOM LH	1002-	80		0309304	DU BUSHING	
BOOM LH	1002-		110	0298907	WEAR RING	
BOOM LH	1002-		110	0667008	WEAR RING	
BOOM RH	1002-	85	120	4389720		
BOOM RH	1002-	80		0309304	DU BUSHING	
BOOM RH	1002-		110	0298907	WEAR RING	
BOOM RH	1002-		110	0667008	WEAR RING	
BUCKET	1002-	75	105	4389721		
BUCKET	1002-	75		0310504	DU BUSHING	
BUCKET	1002-		105	0310510	WEAR RING	
<b>MODEL EX200, EX200LC</b>						
ARM	30001-UP	95	135	4206019		
BOOM LH	30001-UP	85	125	4206018		
BOOM RH	30001-UP	85	125	4206018		
BUCKET	30001-UP	80	120	4206020		
CLAMSHHELL	30001-UP	85	135	4214722		
<b>MODEL EX200-2, EX200LC-2</b>						
ARM	60001-D91/12	95	130	4286780		
ARM	60001-UP	95		0309204	DU BUSHING	
ARM	60001-UP		130	0409912	WEAR RING	
ARM	60001-UP		130	0254309	WEAR RING	
BOOM LH	60001-D91/12	85	120	4286774		
BOOM LH	60001-UP	85		4272960	DU BUSHING	
BOOM LH	60001-UP		120	0261308	WEAR RING	
BOOM LH	60001-UP		120	0309309	WEAR RING	
BOOM RH	60001-D91/12	85	120	4286774		
BOOM RH	60001-UP	85		4272960	DU BUSHING	
BOOM RH	60001-UP		120	0309309	WEAR RING	
BOOM RH	60001-UP		120	0261308	WEAR RING	
BUCKET	60001-D91/12	75	110	4286784		
BUCKET	60001-UP	75		0310504	DU BUSHING	
BUCKET	60001-UP		110	0298907	WEAR RING	
BUCKET	60001-UP		110	0410005	WEAR RING	
BUCKET (River)	60001-D91/12	65	95	4286739		
BUCKET (River)	60001-UP	65		0310604	DU BUSHING	
BUCKET (River)	60001-UP		95	0310610	WEAR RING	
BUCKET (River)	60001-UP		95	0309309	WEAR RING	
CLAMSHHELL	60001-UP	85		4272960	DU BUSHING	
CLAMSHHELL	60001-UP		125	0309009	WEAR RING	
CLAMSHHELL	60001-UP		125	0223713	WEAR RING	
ROLLING	65612-UP	95		0309204	DU BUSHING	
ROLLING	65612-UP		150	0237220	WEAR RING	
<b>MODEL EX200-3, EX200LC-3, EX200H-3, EX200LCH-3</b>						
ARM	78001-UP	95		0309204	DU BUSHING	
ARM	78001-UP		130	0254309	WEAR RING	
ARM	78001-UP		130	0409912	WEAR RING	
ARM	D95/06-UP	95	130	4369914		
BOOM LH	78001-UP	85		4272960	DU BUSHING	
BOOM LH	78001-UP		120	0261308	WEAR RING	
BOOM LH	78001-UP		120	0309309	WEAR RING	
BOOM RH	D95/06-UP	85	120	4369901		
BUCKET	78001-UP	75		0310504	DU BUSHING	
BUCKET	78001-UP		110	0298907	WEAR RING	
BUCKET	78001-UP		110	0410005	WEAR RING	
BUCKET	D95/06-UP	75	110	4369890		
BUCKET (River)	78001-UP	65		0310604	DU BUSHING	
BUCKET (River)	78001-UP		95	0310610	WEAR RING	
BUCKET (River)	78001-UP		95	0310609	WEAR RING	

Please email us for our latest pricing

HITACHI Excavators Price List

Machine Model & Cylinder	Serial Number	Rod	Bore	Seal Kit Number	MISC Parts	NET USD
BUCKET (River)	D95/06-UP	65	95	4369766		
CLAMSHELL	78001-UP	85		4272960	DU BUSHING	
CLAMSHELL	78001-UP		125	0309009	WEAR RING	
CLAMSHELL	78001-UP		125	0223713	WEAR RING	
<b>MODEL EX200-5, EX200LC-5, EX210H-5, EX210LCH-5</b>						
ARM	050001-UP	95	130	4364916		
ARM	050001-UP	95		0309204	DU BUSHING	
ARM					WEAR RING	
ARM	050001-UP		130	0254309	WEAR RING	
BOOM LH	050001-UP	85	120	4364915		
BOOM LH	050001-UP	85		4272960	DU BUSHING	
BOOM LH	050001-UP		120	0261308	WEAR RING	
BOOM LH	050001-UP		120	0667206	WEAR RING	
BOOM RH	050001-UP	85	120	4364915		
BOOM RH	050001-UP	85		4272960	DU BUSHING	
BOOM RH	050001-UP		120	0261308	WEAR RING	
BOOM RH	050001-UP		120	0667206	WEAR RING	
BUCKET	050001-UP	75	110	4369890		
BUCKET	050001-UP	75		0310504	DU BUSHING	
BUCKET	050001-UP		110	0410005	WEAR RING	
BUCKET	050001-UP		110	0298907	WEAR RING	
BUCKET (River)	050001-UP	65	95	4369766		
BUCKET (River)	050001-UP	65		0310604	DU BUSHING	
BUCKET (River)	050001-UP		95	0310609	WEAR RING	
BUCKET (River)	050001-UP		95	0310610	WEAR RING	
CLAMSHELL	050001-UP	85		4272960	DU BUSHING	
CLAMSHELL	050001-UP		125	0223713	WEAR RING	
CLAMSHELL	050001-UP		125	0309009	WEAR RING	
<b>MODEL EX210-5, EX215</b>						
BOOM		85	120	3182405		
ARM		95	130	3182505		
BUCKET		75	110	3182403		
<b>MODEL EX220</b>						
ARM		100	145	4203831		
ARM		100		4272963	DU BUSHING	
BOOM		90	135	4203830		
BOOM		90		4272961	DU BUSHING	
BUCKET		90	135	4203830		
BUCKET		90		4272961	DU BUSHING	
<b>MODEL EX220-2</b>						
ARM		100	135	9103843		
BOOM		90	125	9103842		
BUCKET		85	125	9103844		
<b>MODEL EX220-3, EX220LC-3</b>						
ARM	10001-UP	100	135	9103843		
ARM	10001-UP	100		4272963	DU BUSHING	
BOOM LH	10001-UP	90	125	9103842		
BOOM LH	10001-UP	90		4272961	DU BUSHING	
BOOM RH	10001-UP	90	125	9103842		
BOOM RH	10001-UP	90		4272961	DU BUSHING	
BUCKET	10001-UP	85	125	9103844		
BUCKET	10001-UP	85		4272960	DU BUSHING	
<b>MODEL EX220-5, EX220LC-5, EX230-5, EX230LC-5, EX230H-5, EX230LCH-5</b>						
ARM	1001-UP	100	135	9178284		
ARM	1001-UP	100		4272963	DU BUSHING	
ARM	D96/12-UP	100	135	9178284		
BOOM LH	1001-UP	90		4272961	DU BUSHING	
BOOM RH	1001-UP	90		4272961	DU BUSHING	

Please email us for our latest pricing

# HITACHI Excavators Price List

Machine Model & Cylinder	Serial Number	Rod	Bore	Seal Kit Number	MISC Parts	NET USD
BUCKET	1001-UP	85		4272960	DU BUSHING	
BUCKET (River)	1001-UP	65	95	4369766		
BUCKET (River)	1001-UP	65		0310604	DU BUSHING	
BUCKET (River)	1001-UP		95	0310610	WEAR RING	
BUCKET (River)	1001-UP		95	0310609	WEAR RING	
<b>MODEL EX225</b>						
BOOM		85	120			
ARM		95	130			
BUCKET		75	110			
<b>MODEL EX270, EX270LC</b>						
ARM	50001-UP	105	150	9078844		
BOOM	50001-UP	95	145	9078843		
BUCKET	50001-UP	95	145	9078843		
<b>MODEL EX270-5, EX270LC-5, EX280H-5, EX280LCH-5</b>						
ARM	10001-UP	100		4272963	DU BUSHING	
ARM	10001-UP		145	4185247	WEAR RING	
ARM	10001-UP		145	4194621	WEAR RING	
BOOM LH	10001-UP	95	135	9180587		
BOOM LH	10001-UP	95		4272962	DU BUSHING	
BOOM RH	10001-UP	95	135	9180587		
BOOM RH		95		4272962	DU BUSHING	
BUCKET	10001-UP	90		4272961	DU BUSHING	
<b>MODEL EX300, EX300LC</b>						
ARM		110	165	9078846		
BOOM		100	145	9078845		
BUCKET		95	145	9078843		
<b>MODEL EX300-2-3</b>						
BOOM		100	145	9144510		
ARM		110	165	9144511		
BUCKET		95	145	9144512		
<b>MODEL EX300-3, EX300LC-3, EX300H-3, EX300LCH-3</b>						
ARM		110	165	9123264		
ARM	7001-UP	110		4284534	DU BUSHING	
ARM	7001-UP		165	4194624	WEAR RING	
ARM	7001-UP		165	4194623	WEAR RING	
BOOM LH	7001-UP	100	145	9078845		
BOOM LH	7001-UP	100		4272963	DU BUSHING	
BOOM LH	7001-UP		145	4185249	WEAR RING	
BOOM LH	7001-UP		145	4185247	WEAR RING	
BOOM RH	7001-UP	100	145	9078845		
BOOM RH	7001-UP	100		4272963	DU BUSHING	
BOOM RH	7001-UP		145	4185249	WEAR RING	
BOOM RH	7001-UP		145	4185247	WEAR RING	
BUCKET	7001-HL803556	95	145	9123265		
BUCKET	7001-UP	95		4284535	DU BUSHING	
BUCKET	7001-UP		145	4185249	WEAR RING	
BUCKET	7001-UP		145	4185247	WEAR RING	
BUCKET	HL803557-UP	95	145	9175564		
BUCKET (River)	7001-UP	65		0310604	DU BUSHING	
<b>MODEL EX300-5, EX330-5, EX350-5, EX370-5 (H,HD,K,&amp;LC)</b>						
ARM	20001-UP	115	170	9180582		
ARM	20001-UP	115		4370337	DU BUSHING	
ARM	20001-UP		170	4370063	WEAR RING	
ARM	20001-UP		170	4370064	WEAR RING	
BOOM LH	20001-UP	105	150	9180581		
BOOM LH	20001-UP	105		4383093	DU BUSHING	
BOOM LH	20001-UP		150	4194622	WEAR RING	
BOOM LH	20001-UP		150	4171490	WEAR RING	

Please email us for our latest pricing

# HITACHI Excavators Price List

Machine Model & Cylinder	Serial Number	Rod	Bore	Seal Kit Number	MISC Parts	NET USD
BOOM RH	20001-UP	105	150	9180581		
BOOM RH	20001-UP	105		4383093	DU BUSHING	
BOOM RH	20001-UP		150	4194622	WEAR RING	
BOOM RH	20001-UP		150	4171490	WEAR RING	
BUCKET	20001-UP	95	145	9175564		
BUCKET	20001-UP	95		4284535	DU BUSHING	
BUCKET	20001-UP		145	4185247	WEAR RING	
BUCKET	20001-UP		145	4185249	WEAR RING	
<b>MODEL EX310</b>						
BOOM		100	145			
ARM		110	165			
BUCKET		95	145			
<b>MODEL EX400, EX400LC, EX400H, EX400LCH</b>						
ARM	02001-UP	130	190	4236058		
BOOM LH	02001-UP	115	170	4236057		
BOOM RH	02001-UP	115	170	4236057		
BUCKET	02001-UP	115	170	4236057		
BUCKET	02001-UP	115	170	4236059		
<b>MODEL EX400-3, EX400LC-3, EX400H-3, EX400LCH-3</b>						
ARM	5001-UP	130	190	4438679		
ARM	5001-UP	130		0353004	DU BUSHING	
ARM	5001-UP		190	0242512	WEAR RING	
ARM (Load Shvl)	5001-UP	115	170	4236057		
ARM (Load Shvl)	5001-UP	115		0352704	DU BUSHING	
ARM (Load Shvl)	5001-UP	115		0352708	WEAR RING	
ARM (Load Shvl)	5001-UP		170	0259307	WEAR RING	
ARM (Load Shvl)	5001-UP		170	0352712	WEAR RING	
BOOM LH	5001-UP	115	170	4438672		
BOOM LH	5001-UP	115		0352704	DU BUSHING	
BOOM LH	5001-UP		170	0420109	WEAR RING	
BOOM LH	5001-UP		170	0259307	WEAR RING	
BOOM LH (Load Shvl)	5162, 5164	115	170	4236057		
BOOM LH (Load Shvl)	5162, 5164	115		0352704	DU BUSHING	
BOOM LH (Load Shvl)	5162, 5164		170	0259307	WEAR RING	
BOOM LH (Load Shvl)	5162, 5164		170	0352712	WEAR RING	
BOOM LH (Load Shvl)	5162, 5164	115		0352708	WEAR RING	
BOOM LH (Load Shvl)	5001-UP	115	170	4438672		
BOOM LH (Load Shvl)	5001-UP	115		0352704	DU BUSHING	
BOOM LH (Load Shvl)	5001-UP		170	0259307	WEAR RING	
BOOM LH (Load Shvl)	5001-UP		170	0420109	WEAR RING	
BOOM RH	5001-UP	115	170	4438672		
BOOM RH	5001-UP	115		0352704	DU BUSHING	
BOOM RH	5001-UP		170	0259307	WEAR RING	
BOOM RH	5001-UP		170	0420109	WEAR RING	
BOOM RH (Load Shvl)	5162, 5164	115	170	4236057		
BOOM RH (Load Shvl)	5162, 5164	115		0352704	DU BUSHING	
BOOM RH (Load Shvl)	5162, 5164		170	0259307	WEAR RING	
BOOM RH (Load Shvl)	5162, 5164		170	0352712	WEAR RING	
BOOM RH (Load Shvl)	5162, 5164	115		0352708	WEAR RING	
BOOM RH (Load Shvl)	5001-UP	115	170	4438672		
BOOM RH (Load Shvl)	5001-UP	115		0352704	DU BUSHING	
BOOM RH (Load Shvl)	5001-UP		170	0420109	WEAR RING	
BOOM RH (Load Shvl)	5001-UP		170	0259307	WEAR RING	
BUCKET	5001-UP	115	170	4438672		
BUCKET	5001-UP	115		0352704	DU BUSHING	
BUCKET	5001-UP		170	0420109	WEAR RING	
BUCKET	5001-UP		170	0259307	WEAR RING	
BUCKET		120		0450506	DU BUSHING	

Please email us for our latest pricing

## HITACHI Excavators Price List

Machine Model & Cylinder	Serial Number	Rod	Bore	Seal Kit Number	MISC Parts	NET USD
BUCKET			170	0420109	WEAR RING	
BUCKET			170	0259307	WEAR RING	
BUCKET (Long Arm)	5001-UP	95	145	9123265		
					DU BUSHING	
BUCKET (Long Arm)	5001-UP		145	4185247	WEAR RING	
BUCKET (Long Arm)	5001-UP		145	4185249	WEAR RING	
BUCKET LH (Load Shvl)	5001-UP	115		0352704	DU BUSHING	
BUCKET LH (Load Shvl)	5001-UP		150	0237220	WEAR RING	
BUCKET LH (Load Shvl)	5001-UP	115		0352708	WEAR RING	
BUCKET RH (Load Shvl)	5001-UP	115		0352704	DU BUSHING	
BUCKET RH (Load Shvl)	5001-UP		150	0237220	WEAR RING	
BUCKET RH (Load Shvl)	5001-UP	115		0352708	WEAR RING	
DUMP (Load Shvl)	5001-UP	65		0310604	DU BUSHING	
LEVEL (Load Shvl)	5001-UP	115	170	4236057		
LEVEL (Load Shvl)	5001-UP	115		0352704	DU BUSHING	
LEVEL (Load Shvl)	5001-UP		170	0259307	WEAR RING	
LEVEL (Load Shvl)	5001-UP		170	0352712	WEAR RING	
LEVEL (Load Shvl)	5001-UP	115		0352708	WEAR RING	
<b>MODEL EX400-5, EX400LC-5, EX450LC-5, EX450LCH-5</b>						
ARM	7001-UP	130	190	4438679		
ARM	7001-UP	130		0353004	DU BUSHING	
ARM	7001-UP		190	0242512	WEAR RING	
BOOM LH	7001-UP	115	170	4438679		
BOOM LH	7001-UP	115		0352704	DU BUSHING	
BOOM LH	7001-UP		170	0259307	WEAR RING	
BOOM LH	7001-UP		170	0420109	WEAR RING	
BOOM RH	7001-UP	115	170	4438672		
BOOM RH	7001-UP	115		0352704	DU BUSHING	
BOOM RH	7001-UP		170	0259307	WEAR RING	
BOOM RH	7001-UP		170	0420109	WEAR RING	
BUCKET		115	170	4438672		
BUCKET		115		0352704	DU BUSHING	
BUCKET			170	0259307	WEAR RING	
BUCKET			170	0420109	WEAR RING	
BUCKET		120		0450506	DU BUSHING	
BUCKET			170	0420109	WEAR RING	
BUCKET			170	0259307	WEAR RING	
BUCKET (Long Arm)	7001-UP	95	145	9123265		
BUCKET (Long Arm)	7001-UP	95		4284535	DU BUSHING	
BUCKET (Long Arm)	7001-UP		145	4185247	WEAR RING	
BUCKET (Long Arm)	7001-UP		145	4185249	WEAR RING	
<b>MODEL EX700, EX700H</b>						
ARM	01003-UP	150	215	4254042		
BOOM	01003-UP	140	200	4254041		
BUCKET	01003-UP	130	190	4256110		
<b>HITACHI ZX SERIES</b>						
<b>MODEL ZX70</b>						
BOOM		65	115	4229372		
ARM		60	100	TH106099		
BUCKET		55	90	TH106100		
<b>MODEL ZX75-3</b>						
BOOM		65	115	4663491		
ARM		60	95	4464985		
BUCKET		55	85	4464986		
<b>MODEL ZX100, ZX110,</b>						
BOOM		70	95	4448392		
ARM		75	105	4448393		
BUCKET		65	95	4448394		

Please email us for our latest pricing!



# HITACHI Excavators Price List

Machine Model & Cylinder	Serial Number	Rod	Bore	Seal Kit Number	MISC Parts	NET USD
<b>MODEL ZX120, ZX120E, ZX130H, ZX130K, ZX130LCN</b>						
ARM (2P-Boom)	060001-	80	115	4448396		
ARM (2P-Boom)	060001-	80		0309304	DU BUSHING	
ARM (2P-Boom)	060001-		115	0310908	WEAR RING	
ARM (Mono Boom)	060001-	80	115	4448396		
ARM (Mono Boom)	060001-	80		0309304	DU BUSHING	
ARM (Mono Boom)	060001-		115	0310908	WEAR RING	
ARM (w/ Holding Valve) (2P-Boom)	060001-	80	115	4448396		
ARM (w/ Holding Valve) (2P-Boom)	060001-	80		0309304	DU BUSHING	
ARM (w/ Holding Valve) (2P-Boom)	060001-		115	0310908	WEAR RING	
BOOM L	060001-	70	105	4448395		
BOOM L	060001-	70		0310304	DU BUSHING	
BOOM L	060001-		105	0310510	WEAR RING	
BOOM L (w/ Holding Valve)	060001-	70	105	4448395		
BOOM L (w/ Holding Valve)	060001-	70		0310304	DU BUSHING	
BOOM R	060001-	70	105	4448395		
BOOM R	060001-	70		0310304	DU BUSHING	
BOOM R (w/ Holding Valve)	060001-	70	105	4448395		
BUCKET	060001-	65	95	4448397		
BUCKET	060001-	70		0310304	DU BUSHING	
<b>MODEL ZX160LC</b>						
ARM (2P-Boom)	005001-	90	120	4467380		
ARM (2P-Boom)	005001-		120	0261308	WEAR RING	
ARM (2P-Boom)	005001-		120	0667206	WEAR RING	
ARM (Mono Boom)	005001-	90	120	4467380		
ARM (Mono Boom)	005001-		120	0667206	WEAR RING	
ARM (Mono Boom)	005001-		120	0261308	WEAR RING	
ARM (w/ Holding Valve) (2P-Boom)	005001-	90	120	4467380		
ARM (w/ Holding Valve) (2P-Boom)	005001-		120	0667206	WEAR RING	
ARM (w/ Holding Valve) (2P-Boom)	005001-		120	0261308	WEAR RING	
BOOM L	005001-	80	110	4467379		
BOOM L	005001-	80		0309304	DU BUSHING	
BOOM L	005001-		110	0298907	WEAR RING	
BOOM L	005001-		110	0667008	WEAR RING	
BOOM L (w/ Holding Valve) (2P-Boom)	005001-	80	110	4467379		
BOOM L (w/ Holding Valve) (Mono Boom)	005001-	80	110	4467379		
BOOM L (w/ Holding Valve) (Mono Boom)	005001-	80		0309304	DU BUSHING	
BOOM L (w/ Holding Valve) (Mono Boom)	005001-		110	0667008	WEAR RING	
BOOM L (w/ Holding Valve) (Mono Boom)	005001-		110	0298907	WEAR RING	
BOOM L (w/ Holding Valve) (Mono Boom)	005001-	80		0309304	DU BUSHING	
BOOM R	005001-	80	110	4467379		
BOOM R	005001-	80		0309304	DU BUSHING	
BOOM R	005001-		110	0667008	WEAR RING	
BOOM R	005001-		110	0298907	WEAR RING	
BOOM R (w/ Holding Valve) (2P-Boom)	005001-	80	110	4467379		
BOOM R (w/ Holding Valve) (Mono Boom)	005001-	80		0309304	DU BUSHING	
BOOM R (w/ Holding Valve) (Mono Boom)	005001-		110	0667008	WEAR RING	
BOOM R (w/ Holding Valve) (Mono Boom)	005001-		110	0298907	WEAR RING	
BOOM R (w/ Holding Valve) (Mono Boom)	005001-	80		0309304	DU BUSHING	
BUCKET	005001-	75	105	4467381		
BUCKET	005001-	75		0310504	DU BUSHING	
BUCKET	005001-		105	0310510	WEAR RING	
<b>MODEL ZX200, ZX200LC, ZX210, ZX210LC, ZX210LCH, ZX210K, ZX210LCK, ZX210N, ZX240</b>						
ARM (2P-Boom)	100001-	95	135	4448399		
ARM (2P-Boom)	100001-	95		0309204	DU BUSHING	
ARM (2P-Boom)	100001-		135	0309212	WEAR RING	
ARM (K)	103569-		135	0309212	WEAR RING	
ARM (Mono Boom)	100001-	95	135	f		

Please email us for our latest pricing



# HITACHI Excavators Price List

Machine Model & Cylinder	Serial Number	Rod	Bore	Seal Kit Number	MISC Parts	NET USD
ARM (Mono Boom)	100001-	95		0309204	DU BUSHING	
ARM (Mono Boom)	100001-		135	0309212	WEAR RING	
ARM (Mono Boom)	100001-103568	95	135	4448399		
ARM (River Maint)	100001-	95	130	4364916		
ARM (River Maint)	100001-	95		0309204	DU BUSHING	
ARM (River Maint)	100001-		130	0667409	WEAR RING	
ARM (River Maint)	100001-		130	0254309	WEAR RING	
ARM (River)	100001-	95	130	4364916		
ARM (w/ Holding Valve) (2P-Boom)	100001	95	130	4448399		
ARM (w/ Holding Valve) (2P-Boom)	100001-	95		0309204	DU BUSHING	
ARM (w/ Holding Valve) (2P-Boom)	100001-		135	0309212	WEAR RING	
ARM (w/ Holding Valve) (Mono-Boom)	100001	95	130	4448399		
ARM (w/ Holding Valve) (Mono-Boom)	100001-	95		0309204	DU BUSHING	
ARM (w/ Holding Valve) (Mono-Boom)	100001-		135	0309212	WEAR RING	
BOOM L	100001-		120	0667206	WEAR RING	
BOOM L	100001-	85	120	4448398		
BOOM L	100001-		120	0261308	WEAR RING	
BOOM L (w/ Holding Valve) (2P-Boom)	100001-		120	0667206	WEAR RING	
BOOM L (w/ Holding Valve) (2P-Boom)	100001-	85	120	4448398		
BOOM L (w/ Holding Valve) (2P-Boom)	100001-		120	0261308	WEAR RING	
BOOM L (w/ Holding Valve) (Mono Boom)	100001-	85	120	4448398		
BOOM R	100001-	85	120	4448398		
BOOM R	100001-		120	0261308	WEAR RING	
BOOM R	100001-		120	0667206	WEAR RING	
BOOM R (w/ Holding Valve) (2P-Boom)	100001-	85	120	4448398		
BOOM R (w/ Holding Valve) (2P-Boom)	100001-		120	0261308	WEAR RING	
BOOM R (w/ Holding Valve) (Mono Boom)	100001-	85	120	4448398		
BOOM R (w/ Holding Valve) (Mono Boom)	100001-		120	0667206	WEAR RING	
BOOM R (w/ Holding Valve) (Mono Boom)	100001-		120	0261308	WEAR RING	
BUCKET	100001-	80	115	4448400		
BUCKET	100001-	80		0309304	DU BUSHING	
BUCKET (River Maintenance)	100001-		95	0310610	WEAR RING	
BUCKET (River Maintenance)	100001-	65		0310604	DU BUSHING	
<b>MODEL ZX230</b>						
BOOM		85	120	4485612		
ARM		95	130	4485613		
BUCKET		75	110	4485614		
<b>MODEL ZX250</b>						
BOOM		95	130	4627361		
ARM		105	150	4612721		
BUCKET		85	125	4624394		
<b>MODEL ZX270, ZX270LC, ZX280LC, ZX280LCN</b>						
ARM (2P-Boom)	020001-D04/07, 020001-D04/12	110		4272963	DU BUSHING	
ARM (2P-Boom)	020001-D04/07, 020001-D04/12		145	4194621	WEAR RING	
ARM (2P-Boom)	020001-D04/07, 020001-D04/12		145	4185247	WEAR RING	
ARM (Mono Boom)	020001-D04/07, 020001-D04/13	110		4272963	DU BUSHING	
ARM (Mono Boom)	020001-D04/07, 020001-D04/14		145	4185247	WEAR RING	
ARM (Mono Boom)	020001-D04/07, 020001-D04/15		145	4194621	WEAR RING	
BOOM L	D04/08-, D05/01-	95		0309204	DU BUSHING	
BOOM L	D04/08-, D05/01-		135	0309212	WEAR RING	
BOOM L	020001-D04/07, 020001-D04/15	95		4272962	DU BUSHING	
BOOM R	D04/08-, D05/01-	95		0309204	DU BUSHING	
BOOM R	020001-D04/07, 020001-D04/15			4272962	DU BUSHING	
BUCKET	D04/08-, D05/01-		135	0309212	WEAR RING	
BUCKET	020001-D04/07, 020001-D04/15			4272961	DU BUSHING	
<b>MODEL ZX330, ZX330LC, ZX350LC, ZX350LCH, ZX350H, ZX350K, ZX350LCK, ZX370, ZX370MTH</b>						
ARM (2P-Boom)	030001-	115	170	9180582		
ARM (2P-Boom)	030001-	115		4370337	DU BUSHING	

Please email us for our latest pricing

# HITACHI Excavators Price List

Machine Model & Cylinder	Serial Number	Rod	Bore	Seal Kit Number	MISC Parts	NET USD
ARM (2P-Boom)	030001-		170	4370063	WEAR RING	
ARM (Mono Boom)	030001-D04/07	115	170	9180582		
ARM (Mono Boom)	030001-D04/07	115		4370337	DU BUSHING	
ARM (Mono Boom)	030001-D04/07		170	4370063	WEAR RING	
ARM (Mono Boom)	030001-D04/07		170	4370064	WEAR RING	
BOOM L	030001-D04/07	105	150	9180581		
BOOM L	030001-D04/07	105		4383093	DU BUSHING	
BOOM L	030001-D04/07		150	4194622	WEAR RING	
BOOM L	030001-D04/07		150	4171490	WEAR RING	
BOOM R	030001-D04/07	105	150	9180581		
BOOM R	030001-D04/08	105		4383093	DU BUSHING	
BOOM R	030001-D04/09		150	4194622	WEAR RING	
BOOM R	030001-D04/10		150	4171490	WEAR RING	
BUCKET	030001-D04/07	95	145	9175564		
BUCKET	030001-D04/08	95		4284535	DU BUSHING	
BUCKET	030001-D04/09		145	4185249	WEAR RING	
BUCKET	030001-D04/10		145	4185247	WEAR RING	
<b>MODEL ZX450, ZX450LC, ZX450H, ZX450LCH, ZX460LCH, ZX480MT, ZX480MTH</b>						
BACKHOE ARM	010001-	130	190	4438679		
BACKHOE ARM	010001-	130		0353004	DU BUSHING	
BACKHOE BOOM L	010626, 010638-	115		0352704	DU BUSHING	
BACKHOE BOOM L	010626, 010638-		170	0259307	WEAR RING	
BACKHOE BOOM L	010626, 010638-		170	0420109	WEAR RING	
BACKHOE BOOM L	050002-	115	170	4438672		
BACKHOE BOOM L	010620, 010627-010637	115		4370337	DU BUSHING	
BACKHOE BOOM L	010620, 010627-010637		170	4370064	WEAR RING	
BACKHOE BOOM L	010620, 010627-010637		170	4370063	WEAR RING	
BACKHOE BOOM L	010001-D03-/07	115	170	9180582		
BACKHOE BOOM R	010626, 010638-	115		0352704	DU BUSHING	
BACKHOE BOOM R	010626, 010638-		170	0259307	WEAR RING	
BACKHOE BOOM R	010626, 010638-		170	0420109	WEAR RING	
BACKHOE BOOM R	050002-	115	170	4438672		
BACKHOE BOOM R	010620, 010627-010637	115	170	9180582		
BACKHOE BOOM R	010620, 010627-010637	115		4370337	DU BUSHING	
BACKHOE BOOM R	010620, 010627-010638		170	4370064	WEAR RING	
BACKHOE BOOM R	010620, 010627-010639		170	4370063	WEAR RING	
BACKHOE BOOM R (Long Arm)	010001-	115	170	9180582		
BACKHOE BUCKET	010001-	120		0450506	DU BUSHING	
BACKHOE BUCKET	010001-		170	0259307	WEAR RING	
BACKHOE BUCKET	010001-		170	0420109	WEAR RING	
BACKHOE BUCKET (Long Arm)	010001-	95	145	9123265		
BACKHOE BUCKET (Long Arm)	010001-	95		4284535	DU BUSHING	
BACKHOE BUCKET (Long Arm)	010001-		145	4185247	WEAR RING	
BACKHOE BUCKET (Long Arm)	010001-		145	4185249	WEAR RING	
LOADER BOOM L	010001-	115	170	9180582		
LOADER BOOM L	010001-	115		4370337	DU BUSHING	
LOADER BOOM L	010001-		170	4370063	WEAR RING	
LOADER BOOM L	010001-		170	4370064	WEAR RING	
LOADER BOOM R	010001-	115	170	9180582		
LOADER BOOM R	010001-	115		4370337	DU BUSHING	
LOADER BOOM R	010001-		170	4370064	WEAR RING	
LOADER BOOM R	010001-		170	4370063	WEAR RING	
LOADER BUCKET L	010001-	115		0352704	DU BUSHING	
LOADER BUCKET L	010001-		150	0237220	WEAR RING	
LOADER BUCKET R	010001-	115		0352704	DU BUSHING	
LOADER BUCKET R	010001-		150	0237220	WEAR RING	
LOADER DUMP	010001-	65		0310604	DU BUSHING	
<b>MODEL ZX450-3</b>						

Please email us for our latest pricing

## HITACHI Excavators Price List

Machine Model & Cylinder	Serial Number	Rod	Bore	Seal Kit Number	MISC Parts	NET USD
BOOM		115	170	4653040		
<b>MODEL ZX450DLC</b>						
ARM		130	190	4653041		
BUCKET		115	170	4653042		
<b>MODEL ZX450H</b>						
BOOM		115	170	4310242		
ARM		130	190	4310243		
BUCKET		115	170	4310241		
<b>MODEL ZX650, ZX650DLC</b>						
BOOM		130	190	4653041		
ARM		140	200	4652905		
BUCKET		130	180	4652906		
<b>MODEL ZX670</b>						
BOOM		130	190	4653041		
ARM		140	200	4438684		
BUCKET		130	190	4653041		
<b>MODEL ZX850</b>						
BOOM		140	200			
ARM		150	215			
BUCKET		150	215			

Please email us for our latest pricing

## FIAT-HITACHI Excavators Price List

Machine Models & Cylinders	Rod	Bore	Seal Kits Part Number	NET USD
<b>Model FH120-1</b>				
Arm	80	115	-	
Boom	75	105	-	
Bucket	65	95	-	
<b>Model FH130-3</b>				
Arm	80	115	-	
Boom	70	105	-	
Bucket	65	95	-	
<b>Model FH150-1/2</b>				
Arm	85	120	-	
Boom	80	115	-	
Bucket	80	115	-	
<b>Model FH150-3</b>				
Arm	85	120	-	
<b>Model FH200-1/2</b>				
Arm	95	135	-	
Boom	85	125	-	
Bucket	80	120	-	
<b>Model FH200-3</b>				
Arm	95	135	-	
Boom	85	125	-	
Bucket	80	120	-	
<b>Model FH220-1/2</b>				
Arm	100	145	-	
Boom	90	135	-	
Bucket	90	135	-	
<b>Model FH220-3</b>				
Arm	100	145	-	
Boom	90	135	-	
Bucket	90	125	-	
<b>Model FH300-1</b>				
Arm	110	150	-	
Boom	100	145	-	
Bucket	95	145	-	
<b>Model FH400-1</b>				
Arm	130	190	-	
Boom	115	170	-	
Bucket	115	170	-	

Please email us for our latest pricing